
ENGLISH



3. Operating manual

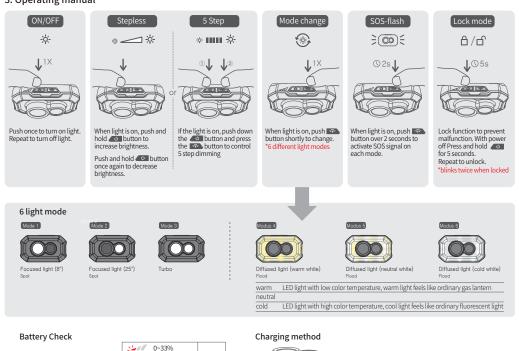

Flickers Stop 5

When charging, battery indicator will flicker \* Remaining battery level will be shown for 2 seconds for each brightness level

1

33~66%


Fully charged

66~99%

## 4. How to use the product

 
1) Using Headband

Insert head band on the band hook of the product and adjust length to fit your head.



### 2) Using Clip

 As described on the picture below, insert clip in the clip hole on the band hook and push until it makes a "click" sound. You can use it on the bag strap or pocket with clip.





Open bottom lid and connect

USB cable to charge lantern.

\* This lantern contains a memory function that

returns to the last setting when turned off and on

#### 4) Lantern hook & karabiner Use the lantern hook with a karabiner or to hang it on a string.

\* Do not disassemble the lantern hook, for it slips easily or loosens when reassembled.

# CLAYMOR3 heady+

# Warrantv

Item	SETO CLAYMORE Heady+
Model No.	1424000032
Date of Purchase	

#### Free Service

1) Failure of the product under normal operating conditions during the warranty period will be repaired by SETOLITE or authorized service center on free of charge. Some shipping or handling charges may be involved. 2) Warranty period: 12 months

1. Thank you for purchasing a SETO CLAYMORE product.

2. This product has passed strict quality control and testing process. When you find some

inappropriate working on the product, please contact authorized service center listed on below.

5) Damage caused by natural disaster

4) Damage from input electricity or cable defect

# Charged Service

1) Damage caused when the warranty period is over

2) Damage caused due to the user's mishandling, abuse, or improper operation 3) Damage caused by arbitrary or personal repair or disassemble in unauthorized service center

#### SETOLITE Lichttechnik GmbH

Bockhackerstr. 13 - 42499 Hückeswagen Tel: +49 (0) 21 92 - 9 36 24-0 Fax: +49 (0) 21 92 - 9 36 24-25 E-mail: info@setolite.de Internet: www.setolite.com

Product name	SETO CLAYMORE Heady+
Model name	1424000032
Color temperature	warm (3000K), neutral (4100K), cold (5700K)
Size	74×44×44,2 mm
Weight	104g
Battery type/capacity	Li-Polymer 3,6V / 3.500mAh
Charging time	6 h
Input	USB 5V / 1A
-	

#### ⚠ Cautions for long-term storage

\* After the battery is fully discharged, the battery remaining indicator may not flash. If this happens, plug the USB cable back in or press the button to turn on the battery indicator again. \* Keep 100% battery capacity when storing for a long time. \* Please keep in mind that if stored below 10°C, the battery life may be affected. \* Please keep in a dry place without moisture.

# **User Manual**

This portable lantern contains a Li-ion battery. Please follow user's manual before using it. If any abnormality is found in the product, please discontinue use and contact the dealer or service center, that you purchased.

#### 1. Caution

- ① Do not use it near high temperature such as fire or heating equipment. It may cause explosion and ignition.
- (2) This product is water resistant. However, if left in the rain for a long time, it may cause malfunction.
- If you accidentally fall into the water, please quickly wipe it off.
- ③ Do not store or use in vehicles exposed to direct sunlight. It may cause explosion and malfunction.
- ④ Do not touch the light source directly as it may become very hot during use.
- ⑤ Do not use when the operating temperature range (-10°C to 40°C) is exceeded.
- 6 Do not look directly into the LED light source.
- ⑦ Please do not place in the reach of infants. It may cause swallowing of parts or injury.
- (8) Supervision is necessary when used by children. Misuse of head lantern may cause injury or electric shock.
- (9) Do not insert any metal parts into the terminal block of the connector. It may cause heat, explosion or electric shock. (10) Do not disassemble or modify the product.
- 1 Do not touch the connector with wet hands. There is a danger of electric shock.
- <sup>(1)</sup> After use, be sure to turn off the power. If not, it may cause leakage.
- <sup>(3)</sup> When adjusting the angle, please do not bent forcefully. It may cause damage to the product.
- (A) Dropping or impacting the product can cause damage to the inside of the product, resulting in unexpected failures in normal use. Be careful not to apply impact to the body.

