

### 3. Operating manual

**ON/OFF**

↓ 1X

Push once to turn on light. Repeat to turn off light.

**Stepless**

When light is on, push and hold button to adjust brightness. Push and hold button once again to decrease brightness.

**5 Step**

① ↓ ② ↓

If the light is on, push down the button and press the button to control 5 step dimming

**Mode change**

↓ 1X

When light is on, push button shortly to change. \*3 different light modes

Mode 1		Focused light(8°) Spot	For hiking
Mode 2		Diffused light(Cool White) Flood	For camping
Mode 3		Diffused light(Warm White) Flood	

LED	Feature
Cool	LED light with high color temperature, cool light feels like ordinary fluorescent light
Warm	LED light with low color temperature, warm light feels like ordinary gas lantern

**SOS-flash**

⌚ 2s ↓

When light is on, push button over 2 seconds to activate SOS signal on each mode.

### 4. How to use the product

1) Using Headband

Insert head band on the band hook of the product and adjust length to fit your head.

2) Using Clip

As described on the picture below, insert clip in the clip hole on the band hook and push until it makes a "Click" sound. You can use it on the bag strap or pocket with clip.

3) Angle adjustment

4 step tilting is possible to light designated area.

maximum 90°

4) Lantern hook & karabiner

Use the lantern hook with a karabiner or to hang it on a string.

\* Do not disassemble the lantern hook, for it slips easily or loosens when reassembled.

**Battery Check**

	0~33%	
	33~66%	Flickers
	66~99%	
	Fully Charged	Stop

When charging, battery indicator will flicker  
\* Remaining battery level will be shown for 2 seconds for each brightness level

**Charging method**

Open bottom lid and connect USB cable to charge lantern.  
\* This lantern contains a memory function that returns to the last setting when turned off and on

# CLAYMORE heady 2

## Warranty

Item	SETO CLAYMORE Heady 2
Model No.	1424000031
Date of Purchase	

1. Thank you for purchasing a SETO CLAYMORE product.
2. This product has passed strict quality controls and testing processes. If the product does not work properly, please contact the authorized service center listed below.

### Free Service

- 1) Failure of the product under normal operating conditions during the warranty period will be repaired by SETOLITE or authorized service center free of charge. Some shipping or handling charges may be involved.
- 2) Warranty period: 12 months

### Charged Service

- 1) Damage caused when the warranty period is over
- 2) Damage caused due to the user's mishandling, abuse, or improper operation
- 3) Damage caused by arbitrary or personal repair or disassembly in unauthorized service center
- 4) Damage from input electricity or cable defect
- 5) Damage caused by natural disaster

### SETOLITE Lichttechnik GmbH

Bockhackerstr. 13 - 42499 Hückeswagen Tel: +49 (0) 21 92 - 9 36 24-0 Fax: +49 (0) 21 92 - 9 36 24-25  
E-mail: info@setolite.de Internet: www.setolite.com

Product name	SETO CLAYMORE Heady 2
Model name	1424000031
Color temperature	Warm white: 3000K, Cold white: 5700K
Size	59,8 × 40 × 39,7mm
Weight	60g
Battery type/capacity	Li-Polymer 3,7V / 1.200mAh
Charging time	2 h
Input	USB 5V / 1A

### ⚠ Cautions for long-term storage

- \* After the battery is fully discharged, the battery remaining indicator may not flash. If this happens, plug the USB cable back in or press the button to turn on the battery indicator again.
- \* Keep 100% battery capacity when storing for a long time.
- \* Please keep in mind that if stored below 10°C, the battery life may be affected.
- \* Please keep in a dry place without moisture.

## User Manual

This portable lantern contains a Li-ion battery. Please follow user's manual before using it. If any abnormality is found in the product, please discontinue use and contact the dealer or service center, where you purchased.

### 1. Caution

- ① Do not use it near high temperature such as fire or heating equipment. It may cause explosion and ignition.
- ② This product is water resistant. However, if left in the rain for a long time, it may cause malfunction. If you accidentally fall into the water, please quickly wipe it off.
- ③ Do not store or use in vehicles exposed to direct sunlight. It may cause explosion and malfunction.
- ④ Do not touch the light source directly as it may become very hot during use.
- ⑤ Do not use when the operating temperature range (-10°C to 40°C) is exceeded.
- ⑥ Do not look directly into the LED light source.
- ⑦ Please do not place in the reach of infants. It may cause swallowing of parts or injury.
- ⑧ Supervision is necessary when used by children. Misuse of head lantern may cause injury or electric shock.
- ⑨ Do not insert any metal parts into the terminal block of the connector. It may cause heat, explosion or electric shock.
- ⑩ Do not disassemble or modify the product.
- ⑪ Do not touch the connector with wet hands. There is a danger of electric shock.
- ⑫ After use, be sure to turn off the power. If not, it may cause leakage.
- ⑬ When adjusting the angle, please do not bent forcefully. It may cause damage to the product.
- ⑭ Dropping or impacting the product can cause damage to the inside of the product, resulting in unexpected failures in normal use. Be careful not to apply impact to the body.

### 2. Parts & Contents

- Lantern hook
- Head band hook
- ON/OFF & Brightness control button
- Mode adjustment button
- Diffusion filter
- Flood light LED
- LED/Lens spot light
- Battery remaining indicator
- USB charging port

① Head band

② Clip

③ Pouch

④ USB charging cable (Micro 5pin)